


**LEFT SIDE OPERATOR CONSOLE AND ENGINE**  
(2/83)

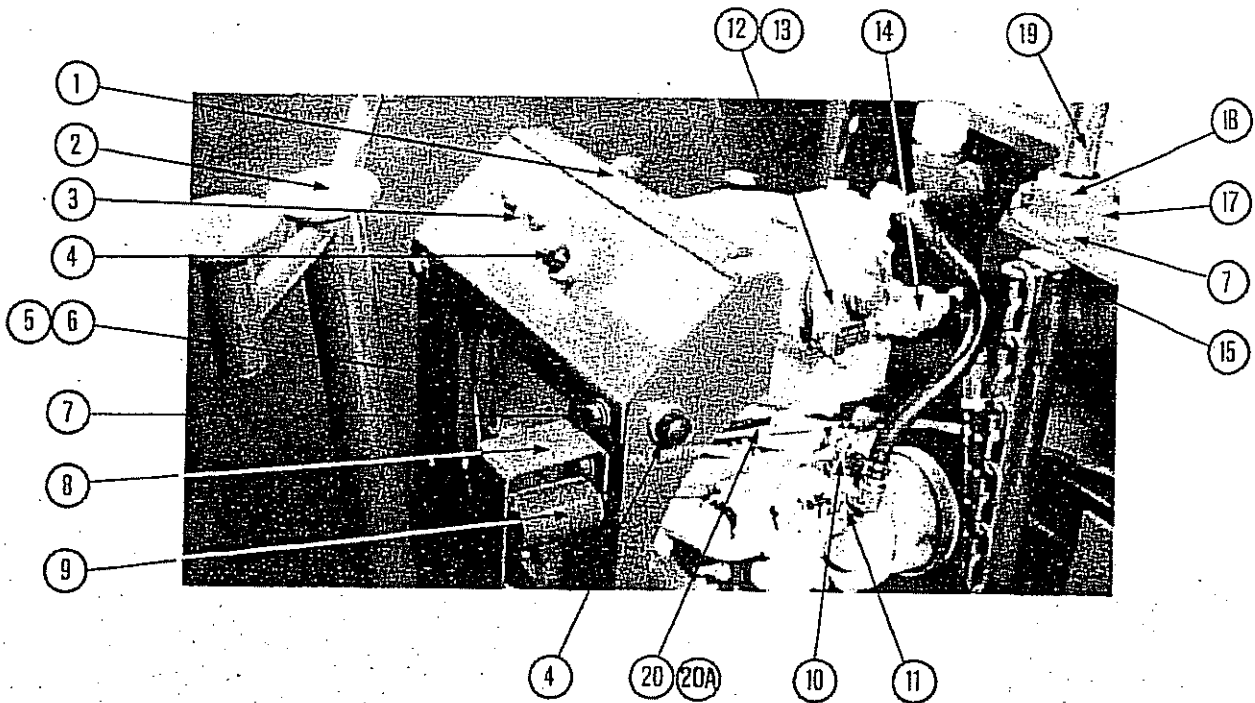

NO.	NUMBER	DESCRIPTION	REQ'D
1	525-140	Console, Operator, Left Side	1
2	525-166	Handle, Screed Depth Screw	1
3	500-055	Switch, Toggle, Auger Control	2
4	525-143	Button Switch	2
5	525-142	Engine, Propane	1
6	525-142R	Engine, Propane, Rebuilt	1
7	606-227	Hex head capscrew, 5/16-18 x 1	1
8	525-207	Solenoid Guard	1
9	550-102	Throttle Solenoid	1
10	550-511	Cold Weather Start Valve	1
11	550-387	Adapter Block, Carburetor, Propane	1
12	525-138	Regulator, Propane, Beam #50-C	1
13	550-608	Repair Kit, Beam Regulator	1
14	550-478	Filter, Propane, Beam #F-108	1
15	500-690	Hex Nut, 5/16-18, Lock Type	5
17	525-149	Bearing Support Plate	1
18	525-151	Bearing, Screed Extention Handle	1
19	525-152	Handle, Screed Extention	1
20	550-342	Throttle Linkage	1
20A	550-559	Throttle Stop Chain	1

**NOTE:**

Ref. # 1, Part # 525-140 is used on pavers up to s/n F-8784-N-9 and including 8824, 8826, 8829 & 8832.  
For pavers with s/n above 8784, see page # 42.

Ref. # 15 through # 19 are for standard pavers only.  
For pavers equipped with Hydraulic Extentions, see page # 40.